

Document Management DM# 2733634

### DISTRIBUTION COMMISSIONING TEST SHEET - NON MPS DISTRIBUTION TRANSFORMER HPC-4DL-07-0021-2014


This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

NOTE: SAFETY: Tests must be carried out after the installation, alteration or repair and before putting back to service.

Revision 3

At all times maintain suitable clearance to all other electrical equipment and verify planned escape routes.

In preparation for the tests, wherever possible, disconnect the cables from the equipment on both sides and make the area safe.

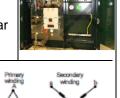

Page 1 of 6

27 October 2021

DATE:	Project I	No.			Name of	Officer			
Transformer Location:									
1. TRANSFORMER D	ESCRIPT	ION							
Rated Voltages	kV	V Ra	ated kVA	kVA	Stock code		Serial Number		
2. VISUAL INSPECTI	ON AND	SAFETY CHECK							
	1	Check that the ins	stallation cor	nplies with the dis	tribution consti	ruction standa	ards (Part 10 G3) and	applicable design drawings.	
	2	Check that Public	Safety has	been considered (	e.g., cabinets	secured and I	ocked, trip hazards re	emoved where applicable).	
	3	Check the supply	to the transf	ormer, that it is sv	vitched off and	isolated as p	er switching sheet and	d permit.	
	4	Confirm (with app	proved testing	g device) that the	transformer is	de-energised.	•		
l or structures, and			earth system is complete, undamaged and bonded to earth points. Check 2 m clearance to conductive services and 15 m clearance to Telstra pits.						
Inspect the following:  • Rating plate	6	Transformer volta	voltage rating matches system voltage.						
<ul><li>Tank and bushings</li><li>Tap setting</li></ul>	7	Transformer tap is	s at the posi	tion of previously i	nstalled transf	ormer or per r	network planning requ	irements.	
Oil level	8	Transformer oil le	evel is satisfactory (if visible).						
<ul><li>HV terminations</li><li>LV terminations</li></ul>	9	Transformer tank	Transformer tank and bushings in good condition (no oil leaks).						
<ul><li>Neutral connection</li><li>MEN/N-E connection</li></ul>	ons 10	HV cables are co	HV cables are correctly rated and properly terminated, connected on to the transformer bushings.						
	11	The dead-end plu	ugs are the c	orrect voltage ratii	ng and correct	y installed (tra	ansformer with 2 sets	of HV bushings).	
	12	LV cables are pro	perly termin	ated and connecte	ed on transforn	ner LV bushin	gs.		
	13	Check the neutra	l cable is cor	nnected to the neu	tral bar, the ea	arth cable to th	ne earth bar, and ched	ck the MEN link is connected.	
	14	All labels fitted an	nd numbered	correctly.					
	15	Check the correct	t winding vol	tage has been sel	ected while ins	stalling dual vo	oltage transformer like	e 6.6-11kV Tx.	





This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

_					
2	INIGIII		RESIST	V NICE .	теет
)_	114201	A 1 16 714	REGIOL	MIN( ) E	1631

Earth resistance	Resistance:	()	Ensure that the earth resistance test has been completed with acceptable results prior to commissioning.						
			Ensure that the high voltage (H energised.	Ensure that the high voltage (HV) and low voltage (LV) windings of the transformer are de- energised.					
Using an insulation resistance tester for a minimum of 1 minute for a stable reading test the following:			Disconnect all connections on t	ransformer HV and L	V bushings, including M	IEN links.			
			Test Connection	Test Voltage	Expected Results	Test Results	3		
(Short circuit all winding terminals of level together.)	of the source of the same voltage		Primary HV to Tank	2.5 kV	>1,000 MΩ		Ω		
			Primary HV to Secondary LV	1 kV	>100 MΩ		Ω		
			Secondary LV to Tank	1 kV	>100 MΩ		Ω		
Confirm transformer has been discharged after testing.									

#### 4. LV PROTECTION DEVICE CHECK


315kVA - 3x 630A NH3 type fuses installed

630kVA - TERASAKI TEMBREAK 2 1600A MCB set and displayed below (Single/Parallel/Sole Use applications)

Confirm that the appropriate LV protection device (and settings) has been installed.

Adjustable settings						
IR	Characteristics	GF				
8.0	2	On				
1280 A						
1	2	3				

Example of setting locations

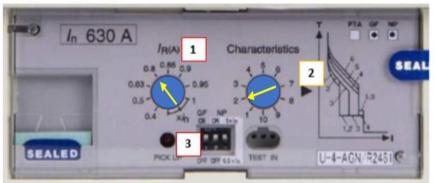






This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

1000kVA – "TERASAKI TEMBREAK 1 2500A" MCB set ar	d displayed below (Single	e/Sole Use applications only)
--	---------------------------	-------------------------------

	Adjustable settings								
lo	11	T1	12	T2	Ramp	13	lg	Tg	
8.0	8.0	25 sec	2	0.3 sec	Off	6	0.4	0.3 sec	
2000 A	1600 A		4000 A			12000 A	1000 A		
1	2	3	4	5	6	7	8	9	

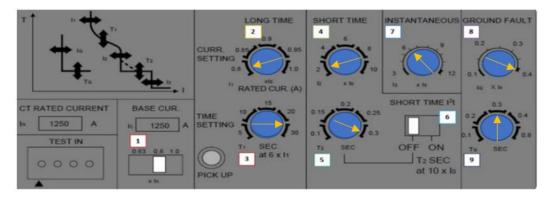

### 5. CABLE RECONNECTION

1	Reconnect phase cables, tighten bolts with recommended torque stated below.	[

- 2 Reconnect neutral cables, tighten bolts with recommended torque stated below.
- 3 Reconnect neutral-to-earth links, tighten bolts with recommended torque stated below.

## Suggested bolt torques:

M10 stainless steel bolts: 38 Nm M12 stainless steel bolts: 66 Nm M14 stainless steel bolts: 106 Nm M16 stainless steel bolts: 162 Nm





This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

6. HANDOVER OF RESP	ONSIBILITY FOR THE	E COMPLETION C	F SECTION 1 T	O 5							
I hereby certify that section	1 to 5 has been comple	ted with satisfacto	ry results and tra	nsfer responsibili	ty to the commissioni	ng officer.					
Testing Officer:					Pay Number:	_					
Signature:	Date:	DD/MM/	YY T	īme:	_	HH:M	M				
7. COMMISSIONING ANI NOTE Highest risk o	f failure of a transform	ner is at energisa			ace and JRA reflects	potential					
	Check that the HV fu	ses are correct.				Fuse Rating				Α	
Check that the transformer	Energies the transformer HV as per HV switching program (check for abnormal noise) Program No.										
LV is not connected to the LV network	Conduct a voltage ar	d phase rotation to	est on LV side of	transformer, pref	ferably at LV disconne	ect or fuse	box.				
Check the HV fuse rating before energising the transformer HV Conduct a voltage and phase rotation test on the LV once the transformer is	Test Connection	Value Ranges	Selected Tap Voltage	Test Results	Test Connection	Value F	anges	Selecte Tap Volta		Test Re	sults
	Red to neutral			V	Red to white						V
	White to neutral	226 – 254 V	V	V	White to blue	390 – 440 V			V	\	
energised.	Blue to neutral			V	Blue to red						V
	Phase rotation (123 of	or abc or RWB)				Rota	tion				





This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

#### PHASING TEST

Conduct a phasing test at the open points of the LV network, where the LV supply is coming from another transformer.

Conduct the phasing test under switching schedules on points of the LV network where the potential of the energised transformer can be matched with the potential of another energised transformer. This test ensures that the interconnections of transformers are made or can be made for operational purposes.

- If the LV conductors are energised from an interconnected transformer, conduct the phasing test at the new transformer's LV disconnector.
- If the LV conductors are not energised, proceed to section 6 and conduct the phasing test on normally open points where it can be interconnected from another transformer.

9. ENERGISATION OF TI	HE LV NETWORK									
	If applicable, ensure all short-circuiting equipment is removed from LV network.									
	If applicable, check that	the LV fuses are correc	t							
	Energise the LV circuits	s as per LV switching pro	ogram.		Program No.					
			mal operating configurati are supplied only from th		that the LV circuits are	not				
Conduct a voltage and	Conduct a voltage test on the LV disconnector of the new transformer to ascertain whether the transformer supply is within statutory limits during load conditions.									
phase rotation test on the LV once the transformer is	Test Connection	Allowed Range	Test Results	Test Connection	Allowed Range	Test Result	s			
energised.	Red to neutral		V	Red to white			V			
	White to neutral	226 – 254 V	V	White to blue	390 – 440 V		V			
	Blue to neutral		V	Blue to red		V				
	Conduct a service connection test on all installations where the service connections have been disturbed.									
	Check that all cabinets	are secured and locked.	(If applicable).							





This commissioning test sheet covers the checking, testing and commissioning of all replacement or new installations of non-modular package substation (non-MPS) ground-mounted transformers up to 1,000 kVA before energisation.

10	OPER	<b>ATION</b>	ΙΔΙ Η	OVER

The com	imissioning officer must ensure that all checks are completed and the test results comply with the	minimum standards	S.				
I hereby certify that all sections have been completed with satisfactory results and transfer responsibility to the network operating authority. This equipment is really approximately							
	SAFELY energised.						
Commi	issioning Officer:	Pay Number:					
Signatu	ure:	Date:	DD/MM/YY	Time:	HH:MM		
1.	Ensure the work area is left tidy with no hazards to the public.						
2.	2. Hand over responsibility to the operating authority						
3.	3. Return this sheet to the project/working file as a record of commissioning and as a document required for the Handover Certificate.						
1. 2.	Ensure the work area is left tidy with no hazards to the public. Hand over responsibility to the operating authority			Time: 	HH:MM		